GB

Before performing any operation read carefully the IOM supplied with the unit .

This component and these instructions are conceived exclusively for the utilisation in conjunction with a unit of the same manufacturer. These operations must be carried out exclusively by qualified technician and instructed on possible risks connected to the

Position

Size

1

2.1 - 3.1

2

4.1 - 8.1


operations.

The electric operations must be carried out by qualified electricians at least according to IEC 60364 .

During the operations follow the local safety regulations.


Before starting, disconnect the unit power line.

Check that the earth system is present and effective.

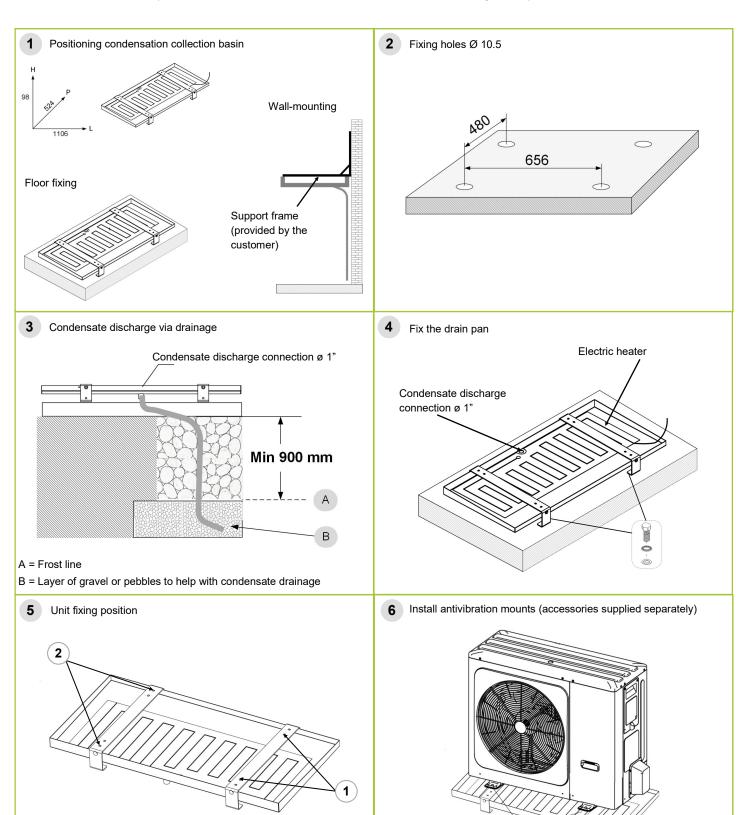



BACINELLA RACCOLTA CONDENSA AUSILIARIA

 PEQ800009/DTX




1 = position the brackets (see point 5)

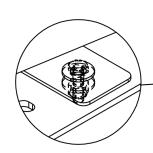


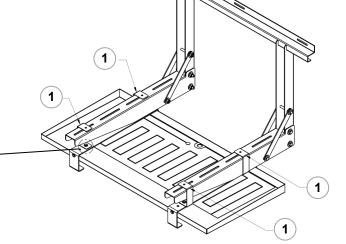


8 Electric heater connection

  
Remove the protective cover (A)

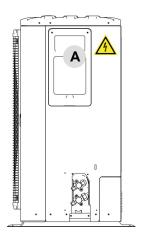





Single-phase supply

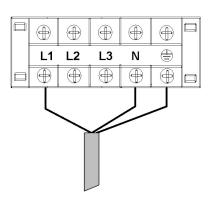

Three-phase supply