



NO.	Describe
AFT	Anti-Freeze Temperature
AT	Ambient Temperature
BT	Buffer Tank Temperature
COMP	Compressor
CT	Coil Temperature
CH	Crankcase Heater
EEV	Electronic expand Valve
ET	Exhaust Temperature
FM	Fan Motor
FS	Flow Switch
FU	Fuse
HP	High Pressure Protection
IT	Inlet Water Temperature
K4	Relay of Circulation Pump
K5	Relay of Hot Water Pump
K9	Relay of 3-Way Valve
K11	Relay of Pan Heater
LP	Low Pressure Protection
LPS	Low Pressure Sensor
OT	Outlet Water Temperature
PH	Pan Heater
SPS	Switching Power Supply
SUT	Suction Temperature
4V	4 Way Valve
TT	Tank Temperature
Field wiring	-----
Factory Wiring	-----
	----- 380VAC or 220V AC
	----- Low Voltage

KHX-16PY3



CODE: 20220920-0002

1-When connecting with Multi-function tank, just connect the 6-core and 2-core connectors with Multi-function tank.
 2-When connecting with other indoor unit, please remove the 6-core and 2-core cables from the terminals. The terminals can be used for connection of the components from the indoor unit.